



Demontering / justering av låda från 2022 och framåt Slim / Slim H / Garbo / Classic / Minimal

Övre låda

Front fixing brackets mounting

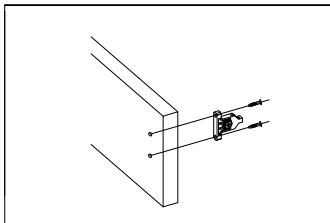


- 1 Installed panel
Remember that tighten the fixing screw

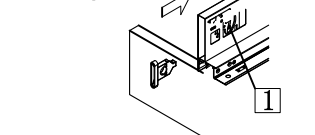


Front panel removing


- 1 Take out the plastic cover

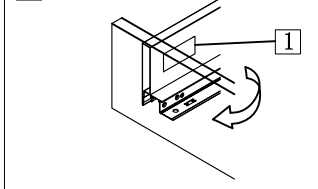


- 1 Loosen the fastening screws
- 2 Rotation to dismantle the panel

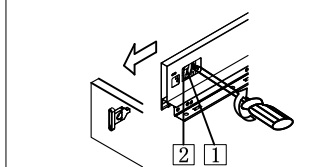


Front panel height adjustment : $\pm 2\text{mm}$

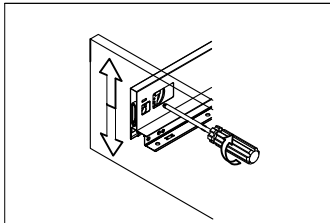




Front panel side adjustment : right 1mm

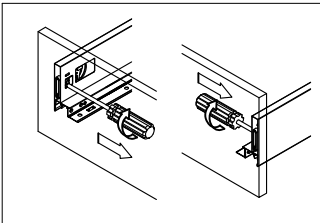


Front panel side adjustment : left 1mm

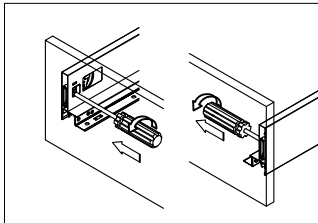

Installing the drawer

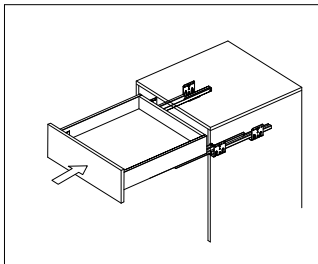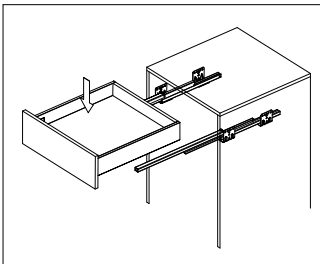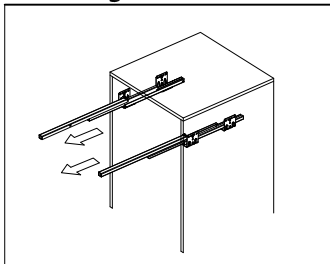


Removing the drawer

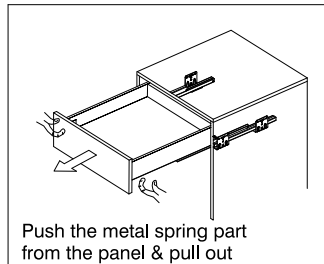


Push the metal spring part from the panel & pull out

Front fixing brackets mounting

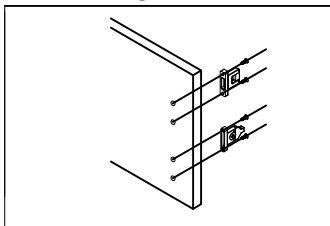


- 1 Tighten the fixing screw after installed the panel
- 2 Press the upper pin into panel after installed the panel

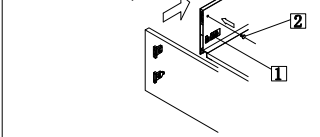


Front panel removing


- 1 Take out the plastic cover
- 2 Take out the upper pin

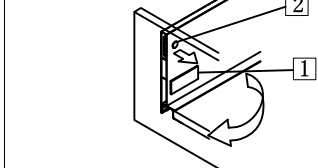


- 1 Loosen the fastening screws
- 2 Rotation to dismantle the panel

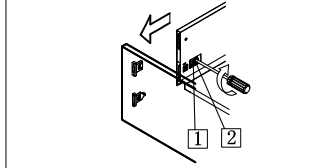


Front panel height adjustment : $\pm 2\text{mm}$

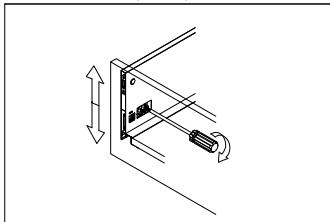




Front panel side adjustment : right 1mm

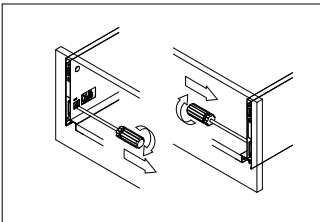


Front panel side adjustment : left 1mm

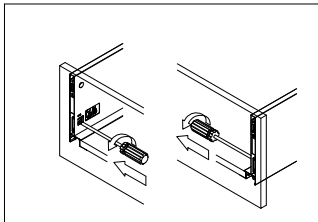

Installing the drawer

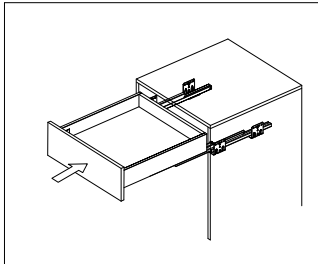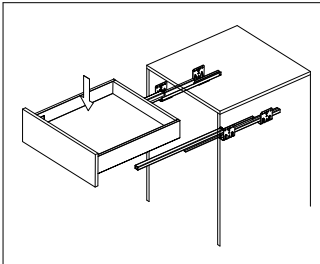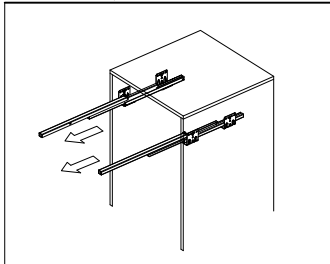

Removing the drawer

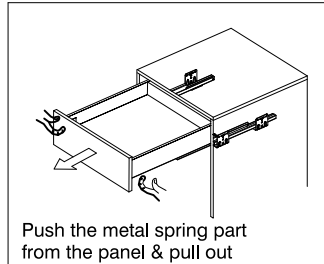

Push the metal spring part from the panel & pull out

Undre låda